



SPIRES • BLUE MOUNTAINS



In-Room Appliance Manual.

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

NEW SOUTH WALES | VICTORIA | QUEENSLAND | TASMANIA | MOROCCO | SINGAPORE

A brand of the **StayWell**
HOSPITALITY GROUP

Welcome to Leisure Inn Spires

Leisure Inn Spires is situated in the quaint township of Leura, Blue Mountains – Just over an hour's drive from Sydney or an easy 1-minute walk from Leura Train Station. The property is an idyllic base for all things blue mountain.

Leisure Inn Spires offers Studio, 1 Bedroom and 2 Bedrooms Apartment to suit your every need. For your convenience, our apartments are equipped with a range of appliances. Please note that appliances listed in this manual may vary within each apartment.

Should you require any assistance, please do not hesitate to contact our friendly team member at Reception by dialling 02 4784 4999 within Reception Hours.

This manual contains the following appliances:

Bedroom

- Electric Blanket
- In Room Safe

Bathroom

- Hairdryer

Living Room

- Television
- Reverse Cycle Air Conditioning Unit

Kitchen or Kitchenette

- Induction Cook Top
- Electric Oven
- Range Hood Extractor
- Microwave Oven
- Automatic Dishwasher

Guest Laundry

 
- Top Loader Washing Machine
- Dryer

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998
ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

Bedroom:

Electric Blanket

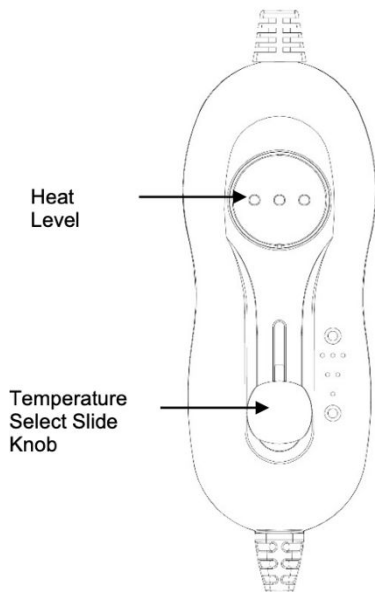

Using the Controller

0 = Off

1 = Low Heat (Suitable for all night use)

2 = Medium Heat

3 = High Heat (For preheating the bed only)

0 = Off

- To select the required heat setting, slide the "Temperature Select Slide Knob" up or down to your desired setting.

- The selected position will be indicated by lighting up the corresponding Red Light.

i.e. If Heat setting "1" is selected, 1 Light will illuminate.

If Heat setting "2" is selected, 2 Lights will illuminate.

If Heat setting "3" is selected, 3 Lights will illuminate.

If Heat setting "0" (Off) is selected no lights will illuminate.

TURN OFF AND UNPLUG THE BLANKET WHEN NOT IN USE.

In Room Safe

The in-room Safe is located in the wardrobe of your bedroom.



To Lock

1. Enter a 3 to 6-digit code and press lock.
2. The display will flash "Lock"

To Open

1. Re-enter the same 3 to 6-digit code
2. The display will flash "Open"
3. Pull the handle to open.

If wrong code is entered, press the CLEAR BUTTON and start again.

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

Living Room

Television

Leisure Inn Spires offers a range of both Free to Air and Foxtel Channels for your enjoyment.



Press RED Power Button to switch TV ON or OFF

Press Vol to adjust TV Volume

Press CH to switch between channels

Channel Guide:


1 = TV One	30 = SBS HD	94 = Extra
2 = ABC	32 = SBS 2	95 = Extra 2
3 = SBS	33 = SBS 3	99 = Go
7 = 7 Digital	34 = NITV	200 = Triple J Radio
9 = Nine	37 = SBS Radio 1	201 = ABC Jazz Radio
10 = Ten	38 = SBS Radio 2	501 = Fox Sports 1
11 = Eleven	39 = SBS Radio 3	502 = Fox Sports 2
12 = TV One	44 = Country 31	503 = Fox Sports 3
14 = TVSN	70 = 7 Digital	504 = Showtime Movies
15 = Spree TV	72 = 7 Two	505 = Showtime Drama
21 = ABC	73 = 7 Mate	506 = BBC World News
22 = ABC 2/Kids	74 = TV4me	507 = Nat Geographic
23 = ABC 3	78 = Racing.com	509 = Sky News

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

 Reverse Cycle Air-Conditioning

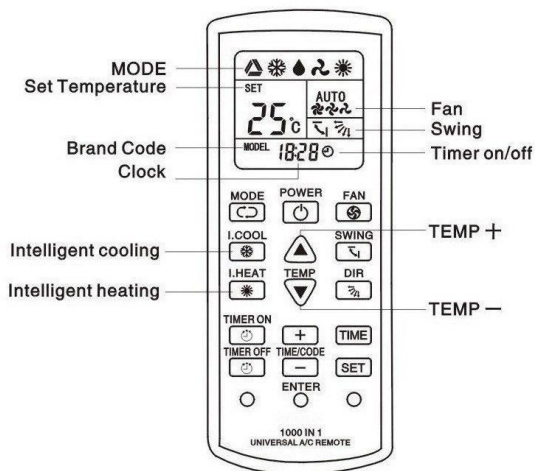

Press Power Button to switch AC ON or OFF

Press MODE to switch between Cooling or Heating

Press TEMP to adjust Desired Temperature

Press FAN to adjust Fan Speed

Additional Notes:

Please allow up to 10 mins from the time you switch on before air-conditioning unit is blowing any air. This is especially true when air-conditioning unit is switching between modes.

For cooling kindly ensure that SNOWFLAKE Mode is selected.

 
Setting the desired temperature below 20 degrees will cause the unit to ice up and shutdown automatically for 30 minutes to thaw and de-ice.

For heating kindly ensure that SUN Mode is selected.

Setting the desired temperature above 25 degrees will cause the unit to overheat and shutdown automatically for 30 minutes to cool down.




Know your air conditioning **remote control** symbols.

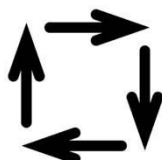

AUTO Mode



 DRY Mode

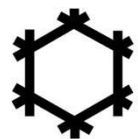

COOL Mode



HEAT Mode

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

Kitchen or Kitchenette

Induction Cook Top



Turn Knob to switch Cook Top ON or OFF

Turn Knob to 11 O'clock position for maximum heating

Turn Knob to 12 O'clock position to switch OFF

Ensure that Range Hood Extractor is turned ON when cooking

Please exercise extra care as cooktop might be hot to touch even though it has been switched off.

Electric Oven



Turn Function Knob to select Oven Function

Turn Temperature Knob to set desired Temperature

Remember to always pre-heat the oven before using

Please exercise extra care as oven might be hot to touch even though it has been switched off.

Located above cook top and are designed to remove heat, and smoke when cooking.

Range hood extractors should be Switched ON at all times when cooking.

To operate:

- Pull Out Sliding Range Hood to Switch Unit ON
- Push In Sliding Range Hood to Switch Unit OFF

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

Microwave Oven



Open microwave door by pushing door release button located on the lower right-hand side of the microwave.

Place food item inside microwave and close door

Press MINUTE Button to set cooking time

Press start button.

Additional Notes:

Never place any metallic objects including aluminium foil in microwave as it is a fire hazard.

Automatic Dishwasher



Load Dishes - Remove all food scraps from dishes

Add Dishwasher Detergent in Compartment

Press the POWER button

Press MODE to Select a Wash Programme

Press Start Button to Begin Washing

Additional Notes:

Ensure there is nothing obstructing the spray arm. The drain filter must be level with the filter plate.

Standard wash programme - when to use				
Heavy <i>Heavily soiled pots, pans and dishes.</i>	Normal <i>Dishes with normal soils for optimum wash and dry performance.</i>	Fast <i>Lightly soiled dishes.</i>	Delicate <i>Lightly soiled and heat sensitive crockery.</i>	Rinse <i>Prevents odours and soils drying on dishes.</i>
pre wash				
main wash 70°C	main wash 65°C	main wash 55°C	main wash 50°C	
post rinse	post rinse	post rinse	post rinse	
post rinse	post rinse		post rinse	
final rinse 65°C	final rinse 65°C	final rinse 50°C	final rinse 60°C	
drying phase	drying phase		drying phase	

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com

Laundry

Top Loader Washing Machine



Load Laundry into Washing Machine

Ensure that load is distributed evenly

Add Washing Machine Powder into Washing Machine

Press the POWER button

Select a Wash Programme

Press Start Button to Begin Washing

Average cycle is 40 mins.

Clothes Dryer



Load Wet Laundry into Dryer

Ensure that load is distributed evenly

Turn Knob to Desired Programme

Hot Temperature for Regular Clothing

Mild Temperature for Delicate Clothing

Press Start Button to Begin Drying

Additional Notes:

In consideration of other guests, please only use laundry facilities in your room between 9am and 9pm. Ensure that Lint Filter is clean as it is a fire hazard. Leave the laundry door OPEN when using dryer to

allow for ideal ventilation in this area.

Leisure Inn Spires

100 Leura Mall, Leura NSW 2780 Phone: +61 2 4784 4999 Fax: +61 2 4784 4998

ABN 79 128 965 971 Email: spires@leisureinnhotels.com www.leisureinnhotels.com